




GRoller-Large User Manual



Best for motorcycles up to 270kg and 240mm Tyre width.


1

Ensure Bike Is on a level ground before using GRoller. With your bike on side stand, position the GRoller in front of the wheel you want to inspect/clean. Place the GRoller such that the stationary rod, shown in the picture, faces the Tyre.

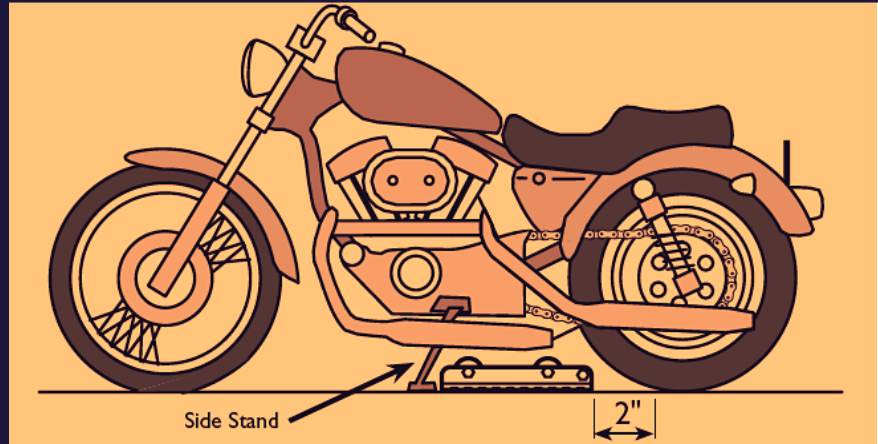


2

Slowly move the bike onto the GRoller such that the tyre is positioned onto the centre of two bigger rollers, shown in the picture. Park the bike carefully on its side stand.

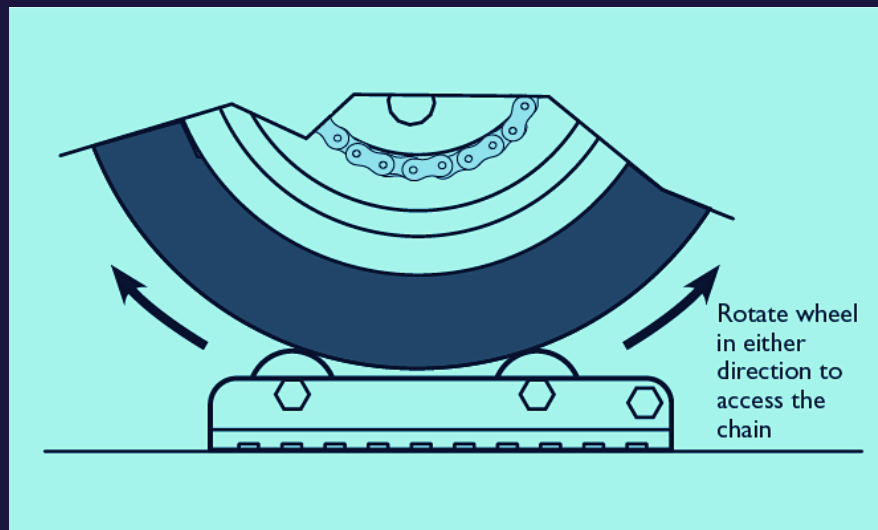

3

Rotate the wheel on the GRoller with a slight push on the wheel. You may also use wheel spokes for the same. Ensure that the Tyre is at the centre of the rollers at all times.

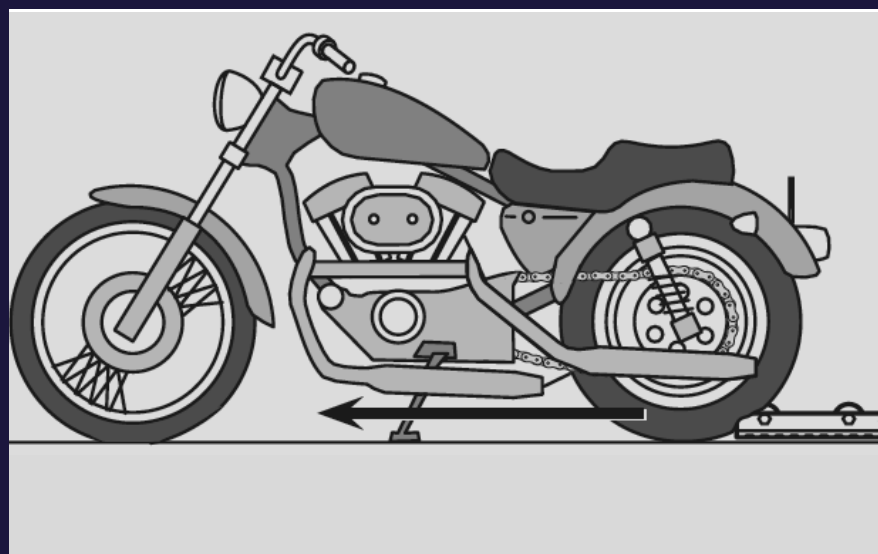

4

After completion, simply lift the bike off its side stand and roll it forward out of the GRoller.

Rules Of The Road When Using GRoller- Large

www.grandpitstop.com

- Make sure the motorcycle engine is switched off at all times.
- Try to keep one hand on the bike when rotating the wheel.